



TILEWARE
PRODUCTS



FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING
(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)


Promessa™ Series Towel Bars

Revised: 10/17/16

Installation Procedures (Gypsum Wallboard/Drywall Surfaces)

For The Following Models:

Model G102-011
Towel Bar (Contemporary)



G102-011-PC




G102-011-BN



G102-011-ORB

Model G102-012
Towel Bar (Traditional)



G102-012-PC




G102-012-BN



G102-012-ORB

STEP 1 Insert Blocking


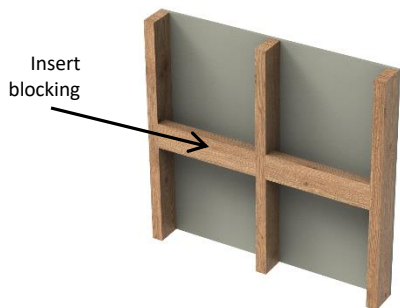


• Insert no less than 2" x 4" wood blocking or locate in vertical stud.


Warning: FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING

(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)

STEP 2 Locate Wood Blocking

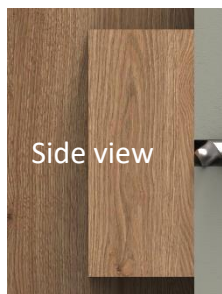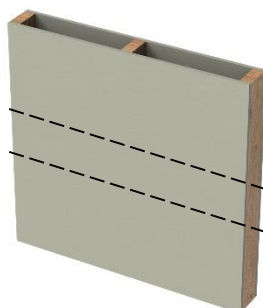


STEP 4 Pre-drill 3/8" holes

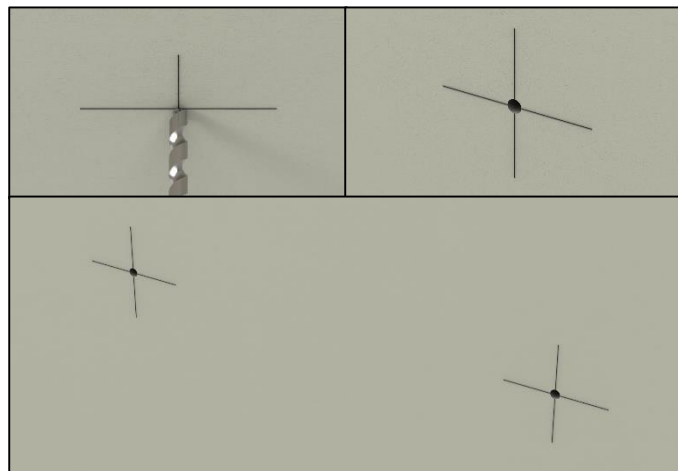


• Pre-drill a 3/8" hole (right and left sides) in gypsum wallboard (drywall) to accommodate spacer in step 5. Place some tape on the drill to mark drill depth. (Example: If wallboard material is 1/2" thickness, only drill that depth. Do not drill into wood blocking). See 'Side view' diagram to the left.

STEP 5 Insert Spacers

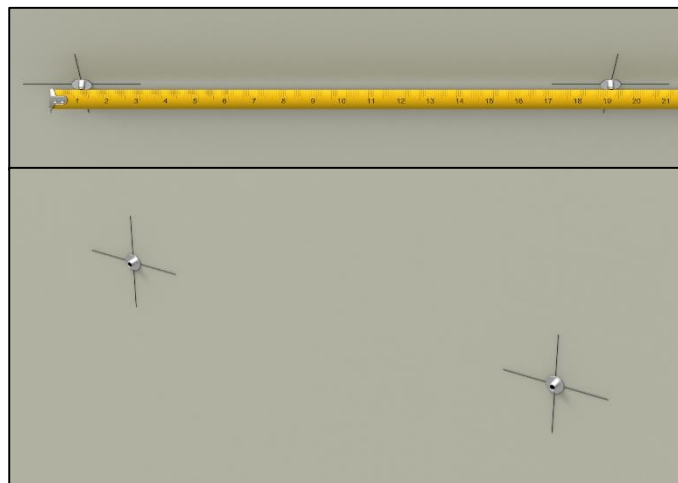

STEP 3 Create Level Lines

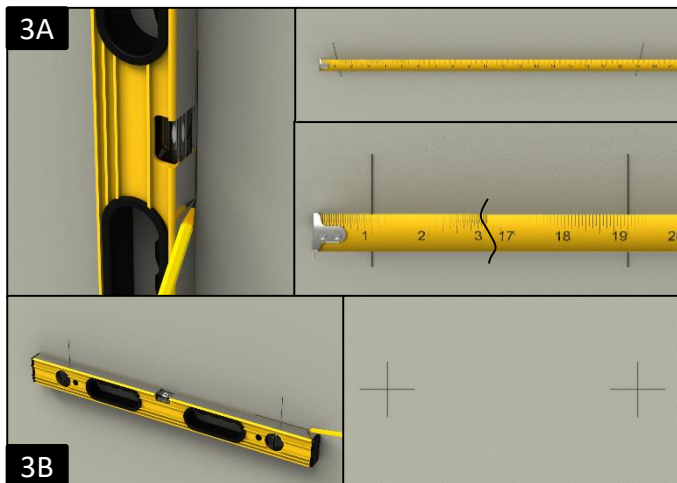

• As illustrated in 3A - Use a level to determine position of right spacer and mark a vertical line. Measure precisely 18" from this line to locate the position of left spacer.

• As illustrated in 3B - Repeat the process above horizontally.

Technical Fact:

Spacer prevents gypsum wallboard (drywall) from collapsing at drilled hole. Additionally, protects from over-tightening screw which can draw the accessory into the gypsum wallboard (drywall) material.



TILEWARE
PRODUCTS




**FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING
(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)**

Promessa™ Series Towel Bars


Installation Procedures (Gypsum Wallboard/Drywall Surfaces)

STEP 6 Understanding Screwdriver

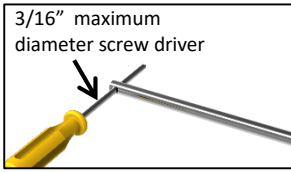


• Towel rod was designed with (2) 1/4" holes which will allow a 3/16" screwdriver to be inserted.

STEP 8 Mount Rod & Left Side Sleeve

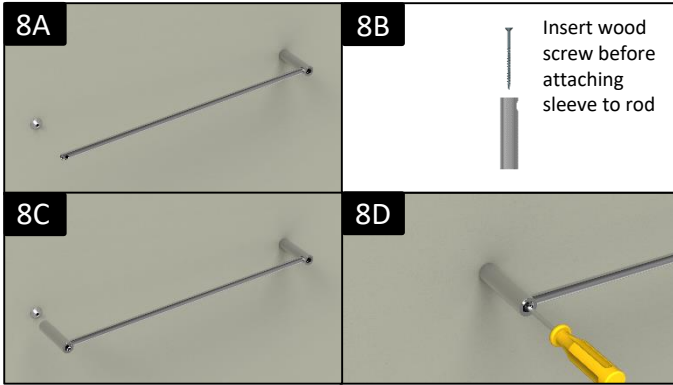


- Insert towel rod into right side sleeve.
- Insert 2 1/2" wood screw into sleeve (screw must be in sleeve before mounting can occur)
- Slip sleeve onto towel rod and insert both together over spacer.
- Using a #2 phillips head screwdriver, attach wood screw and sleeve firmly to blocking.

STEP 9 Attached Caps & Anti-Rotation

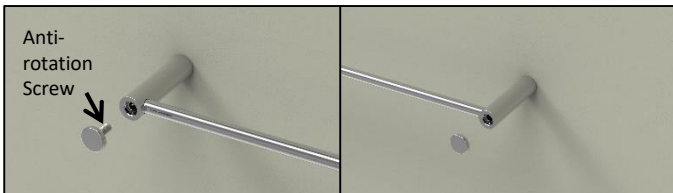

- Thread on caps.
- One cap is equipped with an anti-rotation screw. Slip cap & anti-rotation screw assembly into predrilled 1/4" hole located in towel rod, then thread onto sleeve.
- Installation complete.

STEP 7 Mount Right Side Sleeve

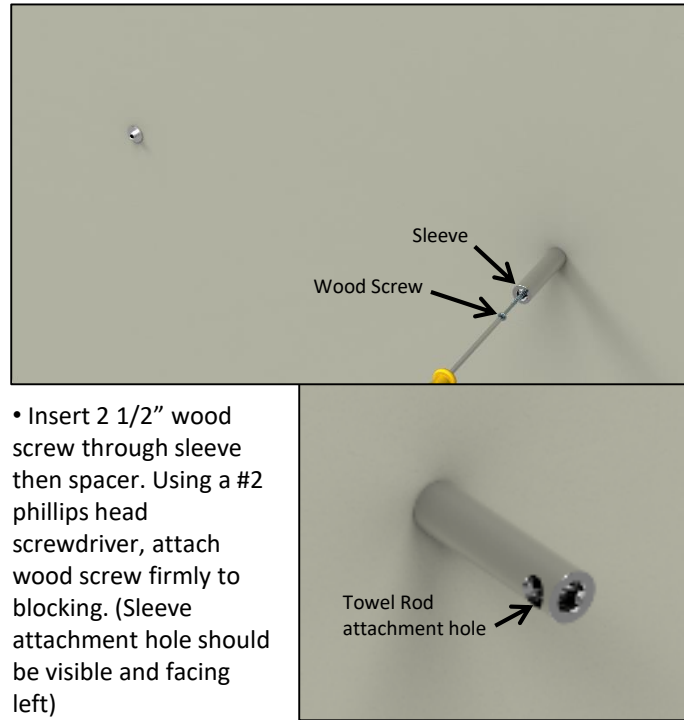

Thank you for using our products!

TileWare Products

PO Box 793, Hickory, NC 28603

Technical Support: 828-322-9273

Email: info@tilewareproducts.com

www.tilewareproducts.com

Model	Spacer quantity 2 per kit	Rod quantity 1 per kit	Sleeve quantity 2 per kit	Cap quantity 1 per kit	Cap & Anti-rotation Screw Assembly quantity 1 per kit	2 1/2" Wood Screw quantity 2 per kit
G101-011 or G101-012 Towel Bar Kits	C200-044 	C220-007 	C220-001 	C220-005 or C220-012 Contemporary - Traditional 	C100-005 	C200-041